

# 158KC45

## Code Setting Instructions

Factory set default code: 0 0 0 0



1. Rotate each wheel so the factory code 0-0-0-0 matches the indicator line on the front of the padlock.




2. Pull the shackle upward to unlock. Turn the shackle 90° anticlockwise.



3. Press and hold down the shackle. Rotate each wheel until your desired code is matches the indicator line (for example 1-2-3-4).



4. Release the shackle. The padlock is now set to your new combination. Turn the shackle back to your starting position (90° clockwise).

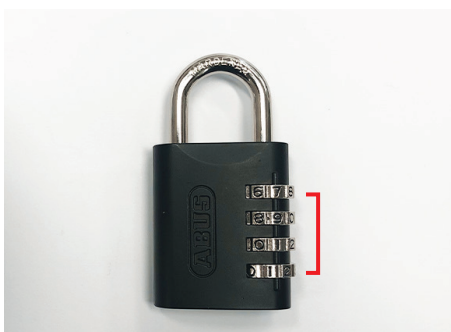

5. To lock the padlock, close the shackle and scramble the wheels to a random number.



6. To unlock the the padlock, set your new combination along the indicator line and pull open the shackle.